


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. *However, do not remove the factory-installed carpeting.*

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD F-150 SUPER CREW SECOND SEAT LINER (FOR KING RANCH OR HARLEY DAVIDSON EDITIONS, USE PART #6306)

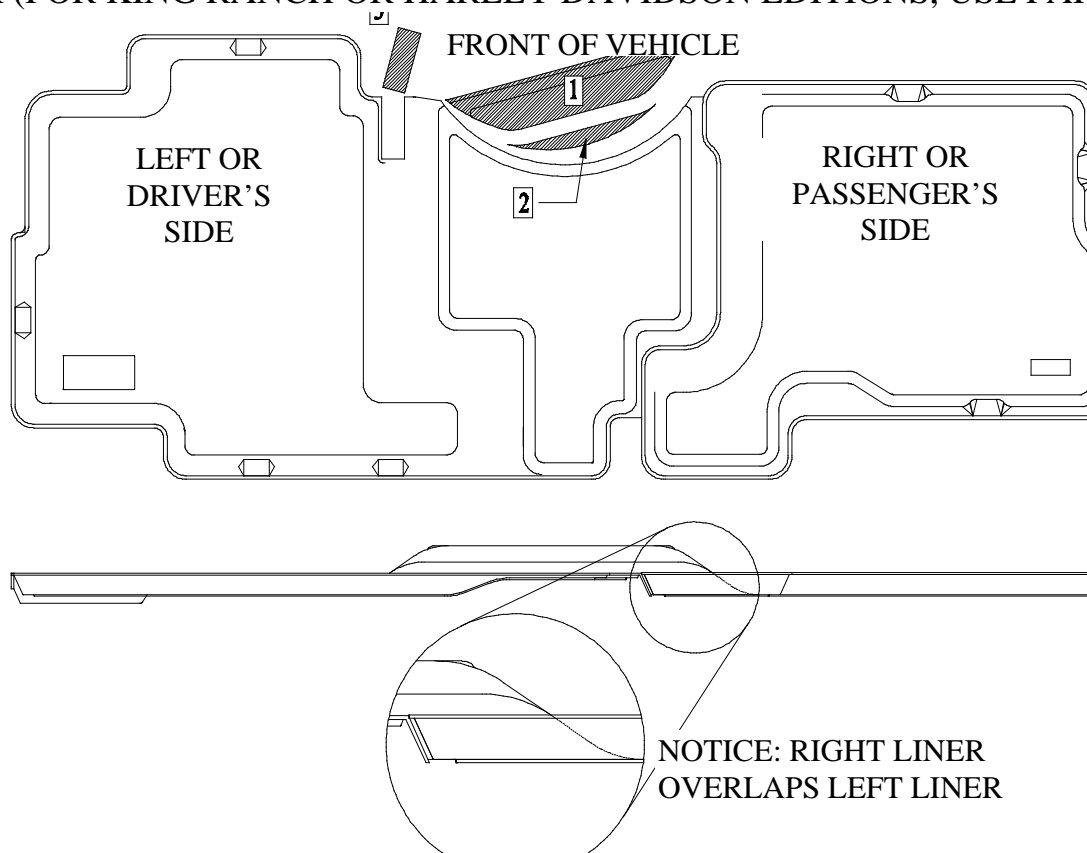

PLEASE TAKE A MOMENT TO COMPLETELY READ THESE INSTRUCTIONS BEFORE BEGINNING INSTALLATION OF YOUR LINERS. ALSO, PLEASE SEE THE BACK OF THIS INSTRUCTION SHEET FOR HELPFUL TRIMMING PHOTOGRAPHS. FIRST, IF YOU HAVE A POWER DRIVER'S SEAT, YOU MUST MOVE IT TO ITS MOST FORWARD POSITION BEFORE BEGINNING INSTALLATION OF THE LINERS. ONCE THE SEAT IS MOVED FORWARD, PLEASE TEST FIT YOUR LINERS. IF YOU HAVE A POWER DRIVER'S SIDE SEAT, TRIM AWAY THE RAISED SECTION ON YOUR LINER AS DEMONSTRATED ABOVE (SEE #3). IF YOUR SUPER CREW IS EQUIPPED WITH A FRONT SEAT CENTER CONSOLE, YOU MAY NEED TO TRIM YOUR LINER BEFORE IT WILL PROPERLY FIT YOUR VEHICLE. THERE ARE TWO TYPES OF CONSOLES AVAILABLE FOR THE F-150 SUPER CREW. ONE TYPE HAS A ROUNDED BACK AND WILL NEED TO BE TRIMMED AS SHOWN ABOVE (SEE #1 AND #2). TRIMMING IS EASILY DONE BY CUTTING ALONG THE RAISED BAND AND SCRIBED LINES, REMOVING AREAS #1 AND #2 SHOWN ABOVE. IF YOUR CONSOLE HAS A "FLAT" BACK,

YOU WILL NEED TO TRIM AWAY ONLY AREA #1. THIS IS THE AREA WITHOUT TREAD THAT IS SLIGHTLY LOWERED. YOU CAN AVOID TRIMMING BY JUST SLIDING THE LINER UNDERNEATH THE BACK EDGE OF THE CONSOLE.

TRIMMED LINER PHOTO'S OF HUSKY LINER PART #6305 FORD SUPER CREW TRUCK



DRIVER'S SIDE TRIMMED FOR
"FLAT" BACK CENTER CONSOLE



DRIVER'S SIDE LINER TRIMMED FOR
"ROUNDED" CENTER CONSOLE



DRIVER'S SIDE TRIMMED FOR POWER
SEAT (SEE #3 ON REVERSE SIDE)



#6305 SHOWN TRIMMED FOR POWER SEAT
WITH SEAT MOVED TO THE MOST
FORWARD POSITION (NO CONSOLE)

IF YOUR FORD F-150 SUPERCREW IS EQUIPPED WITH REAR BUCKETS SEATS AND A REAR CONSOLE, YOU NEED HUSKY LINER PART NUMBER 6306. PLEASE CONTACT YOUR RETAILER AND LET THEM KNOW YOU HAVE THE WRONG PART NUMBER OR CALL US AT 800-344-8759.