

# **HUSKY** **WeatherBEATER™** **Custom Vehicle Floor Protection**

## CARE AND USE INSTRUCTIONS


Thank you for selecting a WeatherBeater™ Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Toyota Sienna Van. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA SIENNA FRONT FLOOR LINERS



LEFT OR DRIVER'S

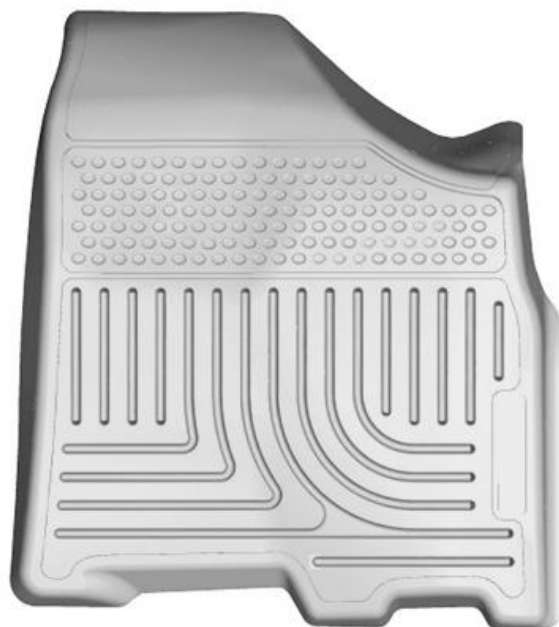

RIGHT OR PASSENGER'S SIDE

**NOTE TO 2011-2012 SIENNA OWNERS:** THE FACTORY CARPET HOOKS LOCATED IN THE CARPET OF THE DRIVER'S SIDE FLOOR WILL NEED TO BE REMOVED TO ALLOW YOUR LINER TO LAY COMPLETELY FLAT. TO REMOVE, APPLY FIRM PRESSURE WHILE LIFTING THE END OF THE HOOK ARM STRAIGHT UP.

**NOTE TO 2013+ SIENNA OWNERS:** BEFORE INSTALLING LINERS, TURN THE FACTORY TWIST-LOCK MAT RETAINERS SO THE TOP HALF IS ALIGNED WITH THE BOTTOM HALF AS THE LINER WILL NEST OVER THE TOP OF THE FASTENER.

TO EASE INSTALLATION OF YOUR FLOOR LINERS, POSITION BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION (SO AS TO GIVE THE MOST LEG ROOM). ONCE LINERS ARE INSTALLED, REPOSITION SEATS AS DESIRED.