


HUSKY **Weather** **BEATER**[™] **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater[™] Cargo Liner from Winfield Consumer Products. Your new trunk liner is custom molded to fit your Avalon. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the cargo area of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will speed the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Do not use Armor All[®], Son-of-a-Gun[®] or similar items as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA AVALON (NON-HYBRID) TRUNK LINER

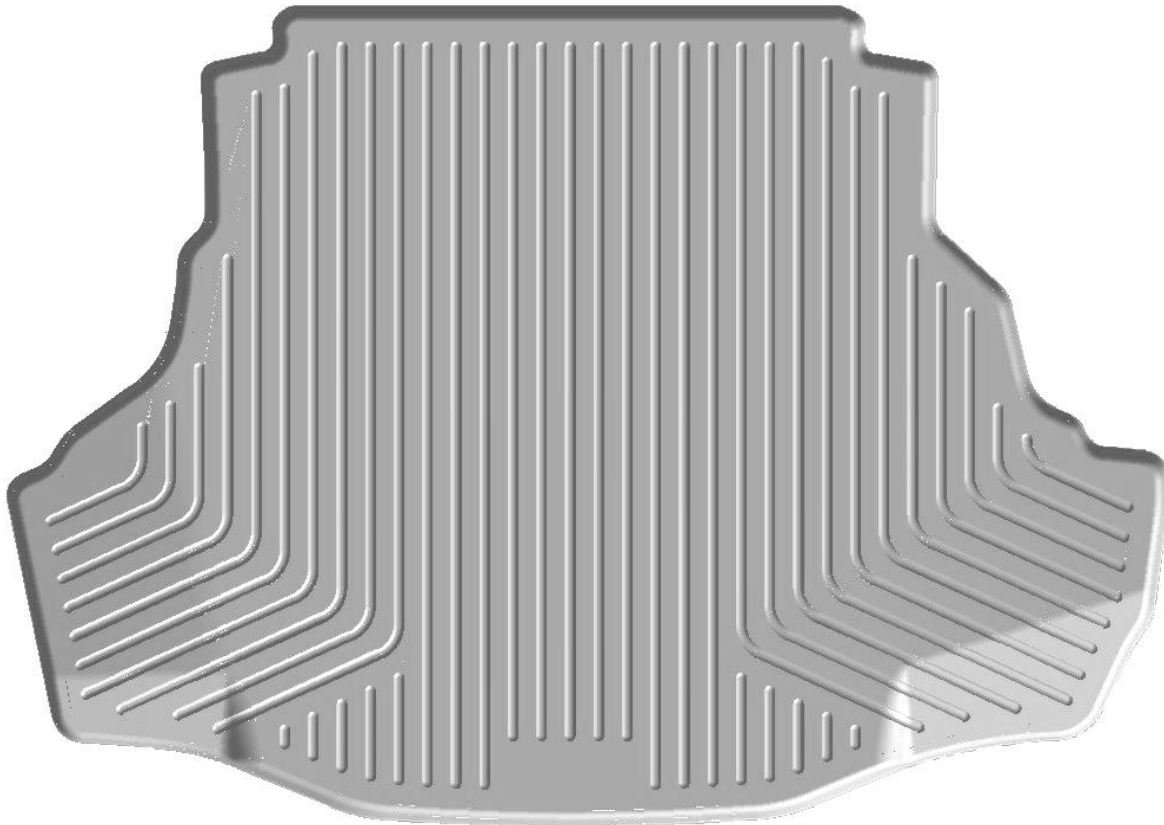

YOUR TOYOTA AVALON TRUNK LINER IS DESIGNED TO FIT STANDARD AVALON MODELS. IT WILL NOT FIT HYBRID VERSIONS WHICH INCLUDE A BATTERY PACK IN THE FRONT PORTION OF THE TRUNK AREA.