



# X-ACT CONTOUR


## FLOOR LINERS

### CARE AND USE INSTRUCTIONS – PN: 53181

---

Thank you for selecting an X-act Contour™ 2<sup>nd</sup> Seat Floor Liner from Husky Liners Inc. Your new floor liner is custom molded to fit your specific vehicle's floor board. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

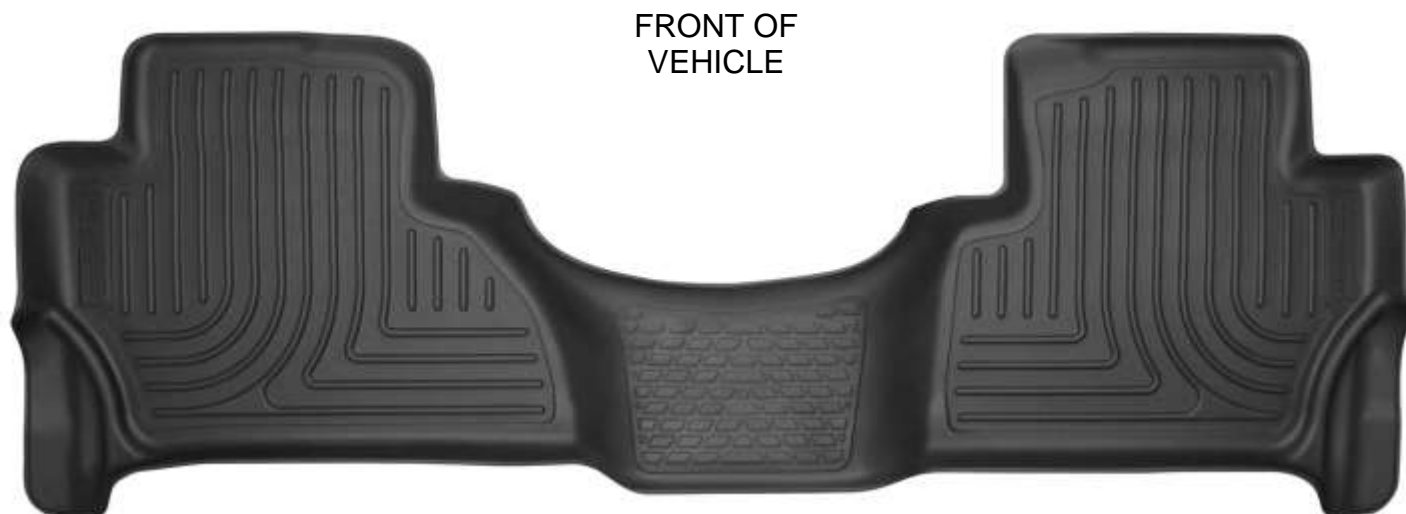

TO EASE INSTALLATION OF YOUR ESCALADE SECOND SEAT LINER, MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITIONS. WITH THIS DONE, INSERT LINER IN VEHICLE ANGLING THEM SO THAT THE FRONT EDGE OF THE LINER IS SEATED INTO PLACE FIRST, THEN LOWER THE REAR OF THE LINER. ONCE THE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.