




X-ACT CONTOUR

FLOOR LINERS

CARE AND USE INSTRUCTIONS – PN:53241

Thank you for selecting an X-act Contour™ 2nd Seat Floor Liner from Winfield Consumer Products. Your new floor liner is custom molded to fit your specific vehicle's floor board. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting. Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

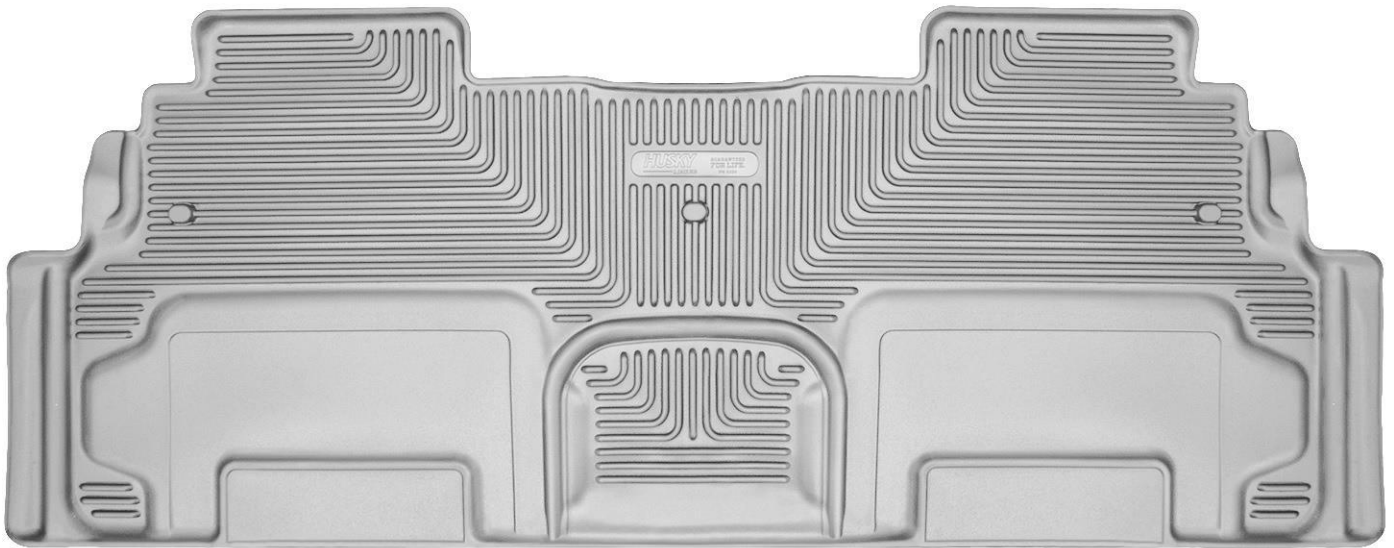

Your liner will accommodate the movement of the 2nd row seats for increased 3rd row legroom via trimming. It also includes a trimmable area to allow proper fitment with a 2nd row console. Please see back of liner for trim instructions.




LINER SHOWN TRIMMED TO ACCOMMODATE 2ND ROW CONSOLE



Use the molded in step running around the inside edge of the molded-in rib as your trimming guide and trim as shown above. A pair of scissors or a utility knife work well for trimming.

LINER SHOWN TRIMMED TO ACCOMMODATE SLIDING THE 2ND ROW SEATS FORWARD TO ALLOW MORE 3RD SEAT LEG ROOM AND FOR SEAT STORAGE

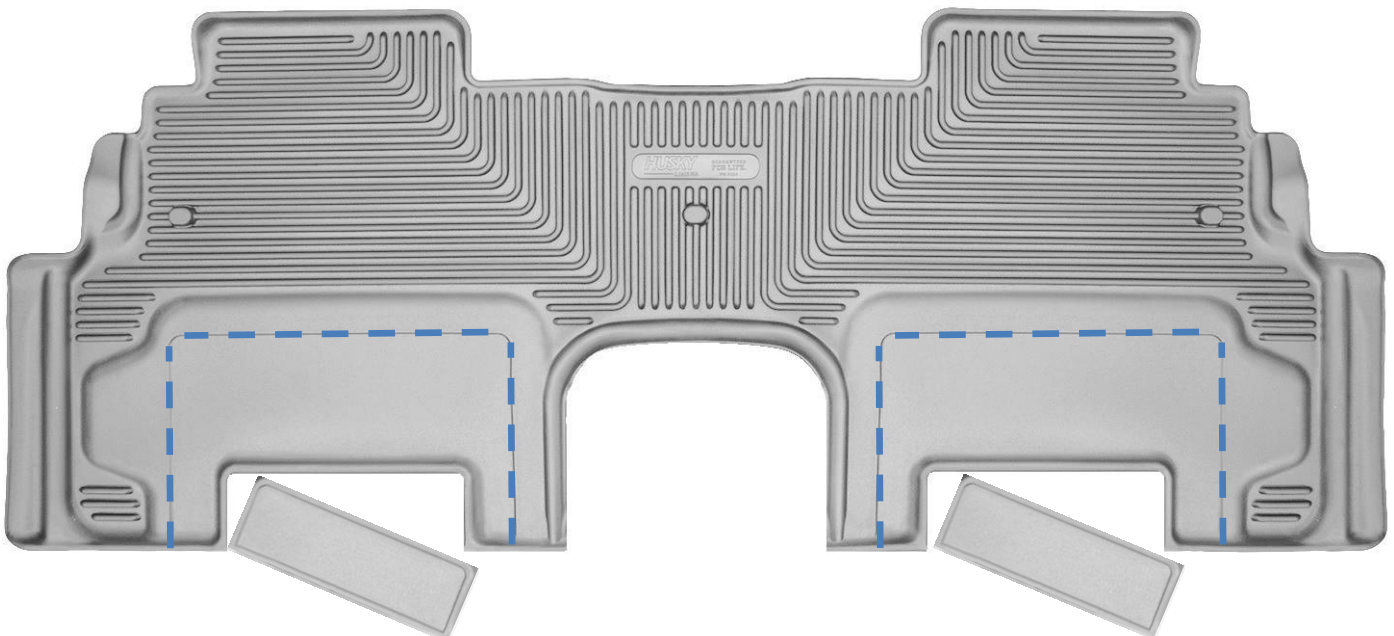

To trim for extended 3rd row leg room (trim is demonstrated)--use the molded step around the raised sections along the back wall of the liner as a trimming guide. One or both of the areas may be trimmed.

To trim for full forward seat movement—use the molded in step in the liner as your trim guide and remove one or both areas (step is highlighted with dotted line above). A pair of scissors or a utility knife work well for trimming.