

# HUSKYLINERS®

## weatherBEATER


### CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Ford F250/F350/F450 Crew Cab truck. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR FORD F-SERIES SUPER DUTY CREW CAB TRUCK FRONT FLOOR LINERS

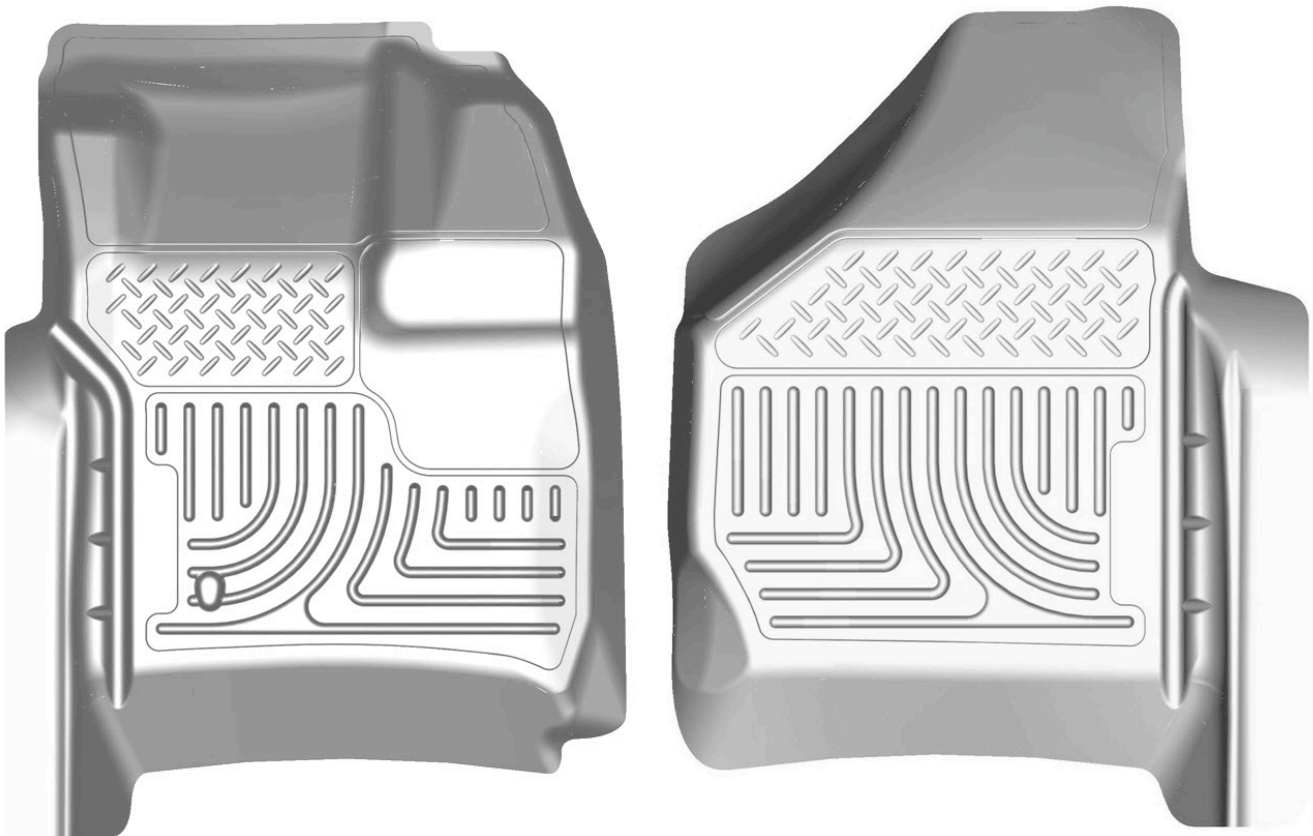

LEFT OR DRIVER'S SIDE

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, MOVE BOTH FRONT ROW SEATS ALL THE WAY BACK SO AS TO ALLOW THE MOST LEG ROOM. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE FRONT SEATS AS DESIRED.

# HUSKYLINERS®

## weatherBEATER

### CARE AND USE INSTRUCTIONS


---

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Ford F250/F350/F450 Crew Cab truck. The liner is made to take the place of your factory floor mat. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

### INSTALLATION INSTRUCTIONS FOR YOUR FORD F-SERIES SUPER DUTY CREW CAB TRUCK 2<sup>nd</sup> SEAT FLOOR LINER

FRONT OF  
VEHICLE

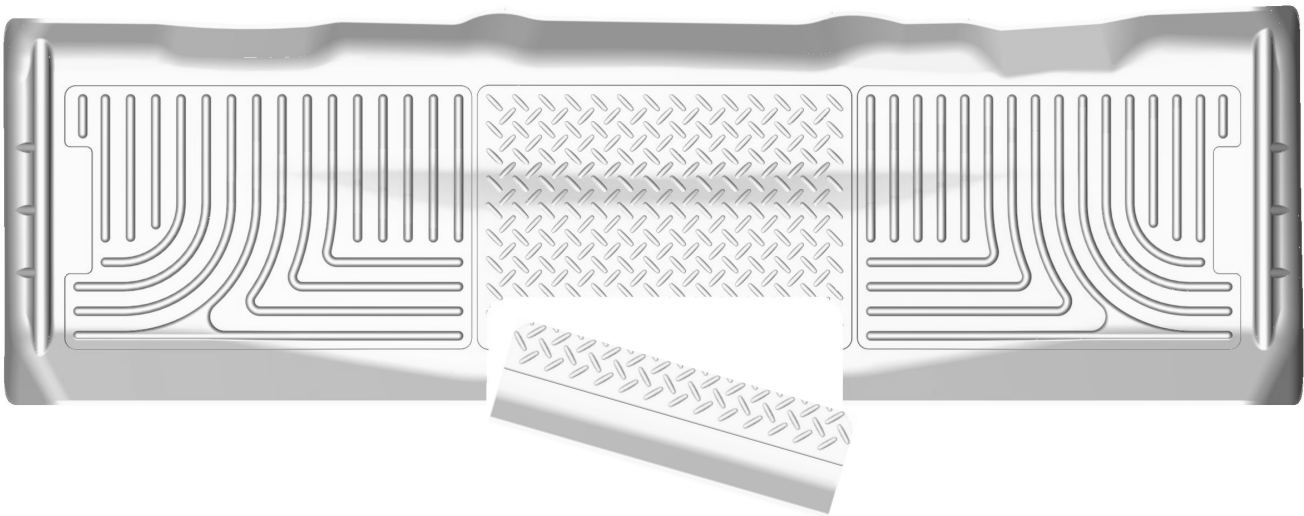

TO EASE INSTALLATION OF YOUR 2<sup>nd</sup> SEAT CREW CAB FLOOR LINER, FIRST MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITIONS. WITH THIS DONE, INSERT LINER IN VEHICLE THEN REPOSITION THE FRONT SEATS AS DESIRED.

IF YOUR CREW CAB HAS SECOND ROW BUCKET SEATS WITH A CONSOLE BETWEEN THE TWO BUCKET SEATS, YOU WILL NEED TO TRIM YOUR LINER SO IT WILL ACCOMMODATE THE SPACE TAKEN UP BY THE FACTORY CONSOLE. TO TRIM, SIMPLY USE THE MOLDED IN STEP IN THE PART AS YOUR TRIM GUIDE AND REMOVE THE LOWERED SECTION OF THE LINER AS DEPICTED IN THE DRAWING ABOVE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.