

**DODGE DURANGO WITH FENDER FLARES  
FRONT MUD GUARDS  
INSTALLATION INSTRUCTIONS**

*Please read instructions thoroughly before installation.*

**Tools Required:**

- 1/8" drill bit / Drill
- Center punch / Hammer
- Short Phillips screwdriver
- Marking utensil (fine tip marker, grease pencil, etc.)

**Package Contents**

- Driver & passenger side mud guard
- #10 SEM screws (qty. 8)
- Instruction sheet

**NOTE:** Turn the front wheels all the way to the left or right for mud guard installation. However, it may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove existing factory fastener from location D (Figure 1).
3. Attach mud guard to front fender with factory fastener at location D, check fit and level before tightening.
4. Using mud guard as a template, mark, center punch, and drill 1/8" hole at locations A, B, C, and E (Figure 1).
5. Attach mud guard to fender with #10 SEM screws at locations A, B, C, and E.

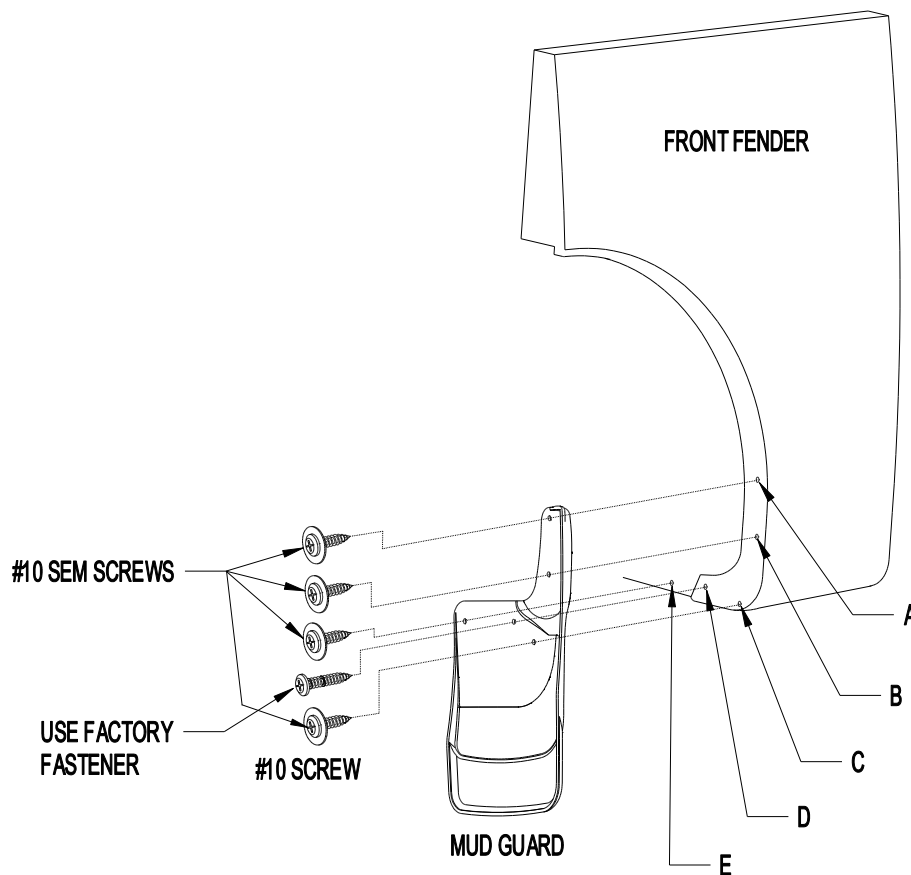


Figure 1

**PAINTING INSTRUCTIONS**

1. Clean mud guard with a soap and water solution to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer