


**THANK YOU FOR SELECTING A HUSKY FLOOR LINER
FROM WINFIELD CONSUMER PRODUCTS
CARE AND USE INSTRUCTIONS**

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

**INSTALLATION INSTRUCTIONS FOR YOUR FORD F-150 SUPER CREW
TRUCK SECOND SEAT FLOOR LINER (INCLUDING KING RANCH)**

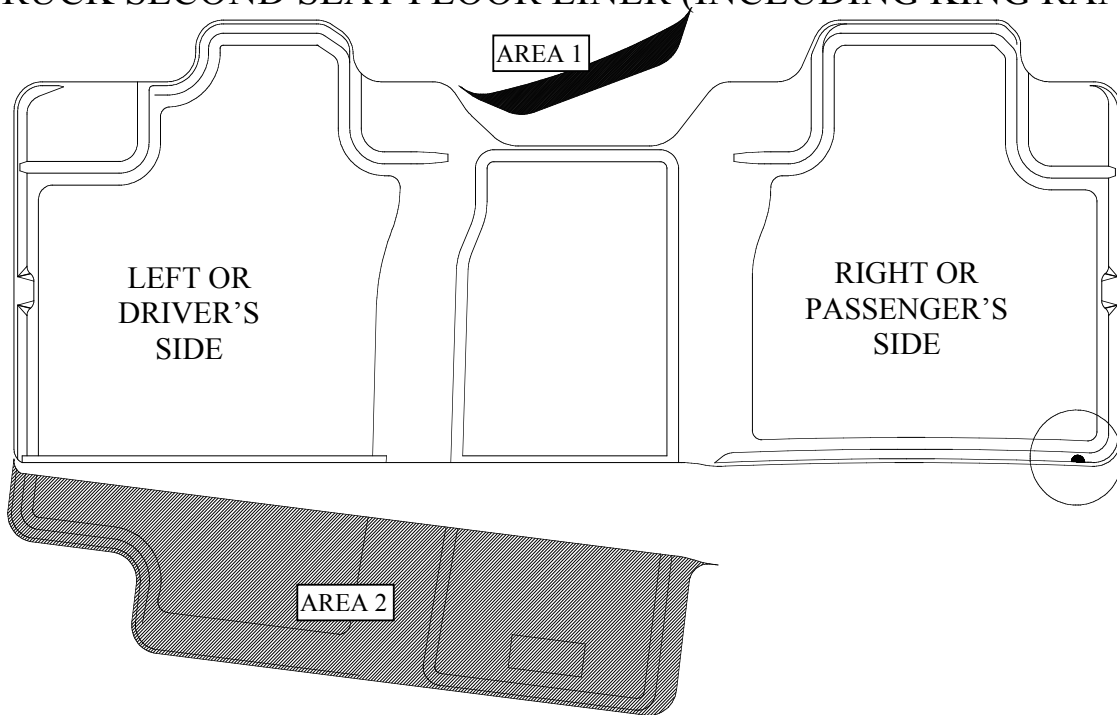

IF YOUR VEHICLE IS EQUIPPED WITH THE FACTORY 40/20/40 FRONT BENCH SEAT, IT WILL BE NECESSARY TO TRIM AWAY A PORTION OF THE LINER TO ACHIEVE THE PROPER FIT. TRIM BY REMOVING THE SMOOTH AREA (NO TREAD PLATE) OF THE LINER LOCATED ALONG THE FRONT EDGE OF THE PART AS SHOWN ABOVE (SEE AREA 1). A UTILITY KNIFE OR SCISSORS WORK WELL FOR TRIMMING. USE MOLDED IN GROOVE AS TRIMMING GUIDE (SEE PHOTOS ON BACK OF PAGE).


IF YOUR VEHICLE IS EQUIPPED WITH A FACTORY SUBWOOFER LOCATED UNDER THE DRIVER'S SIDE REAR SEAT, YOU WILL NEED TO TRIM YOUR LINER TO ACCOMMODATE THIS FEATURE. TO TRIM THE LINER, USE THE RAISED GROOVE AS YOUR TRIMMING GUIDE AND TRIM ALONG THE BACK EDGE OF THE GROOVE (LEAVING GROOVE). CONTINUE TRIMMING OVER THE HUMP USING THE OFFSET STEP IN THE PART AS YOUR GUIDE. PHOTOS OF THE TRIMMED PART ARE INCLUDED ON BACK OF THIS PAGE.

IF YOU ARE INSTALLING A HUSKY GEAR BOX ON TOP OF YOUR LINER, SIMPLY FOLLOW THE INSTRUCTIONS PROVIDED WITH YOUR GEAR BOX. THE GEAR BOX WILL REST ON TOP OF YOUR LINER. NOTE THAT IN ONE SMALL AREA, THE WALL OF THE GEAR BOX WILL PASS OVER THE WALL OF THE LINER. THERE IS A SMALL "U-SHAPED" AREA MOLDED INTO THE LINER WALL (SEE CIRCLED AREA ABOVE) THAT CAN BE TRIMMED TO ALLOW THE GEAR BOX TO NEST MORE EASILY OVER LINER.

PART #6368 UNTRIMMED. USE UNTRIMMED PART IN VEHICLE WITH FACTORY CENTER CONSOLE BETWEEN FRONT SEATS.



PART #6368 SHOWN TRIMMED. USE TRIMMED PART IN VEHICLE WITH FACTORY 40/20/40 FRONT ROW BENCH SEATS.

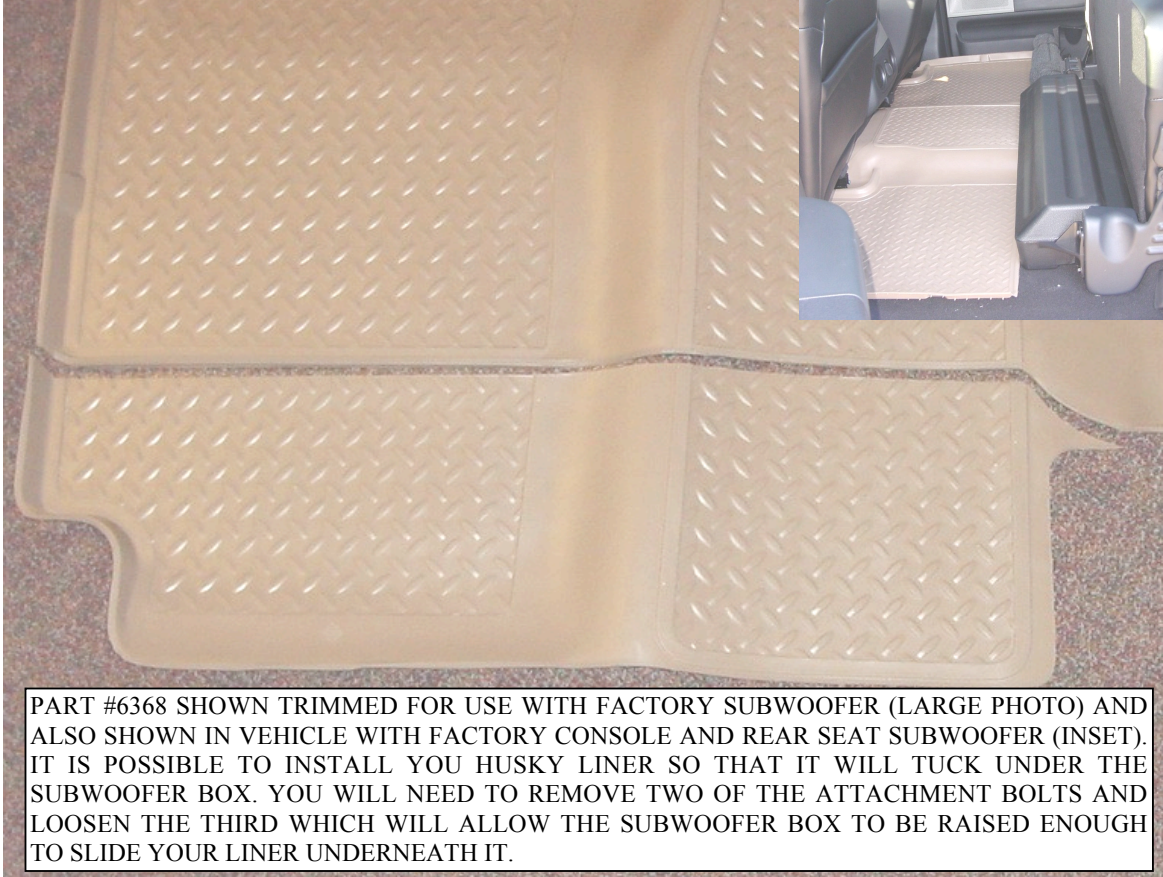

PART #6368 SHOWN TRIMMED FOR USE WITH FACTORY SUBWOOFER (LARGE PHOTO) AND ALSO SHOWN IN VEHICLE WITH FACTORY CONSOLE AND REAR SEAT SUBWOOFER (INSET). IT IS POSSIBLE TO INSTALL YOUR HUSKY LINER SO THAT IT WILL TUCK UNDER THE SUBWOOFER BOX. YOU WILL NEED TO REMOVE TWO OF THE ATTACHMENT BOLTS AND LOOSEN THE THIRD WHICH WILL ALLOW THE SUBWOOFER BOX TO BE RAISED ENOUGH TO SLIDE YOUR LINER UNDERNEATH IT.



PART #6368 HAS AN OPTIONAL TRIM TO ALLOW IT TO BETTER ACCOMMODATE THE HUSKY GEAR BOX. SIMPLY REMOVE THE MATERIAL FROM THE RECESSED "U-SHAPED" AREA AS SHOWN ABOVE.