


HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater™ Floor Liner from Winfield Consumer Products. Your new third seat liner is custom molded to fit your Suburban/Yukon XL/Escalade ESV with 2nd row bench seats. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Using Armor All®, Son-of-a-Gun® or like items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR ESCALADE ESV, SUBURBAN OR YUKON XL 3RD SEAT LINER (MODELS WITH 2ND ROW BENCH SEATS)

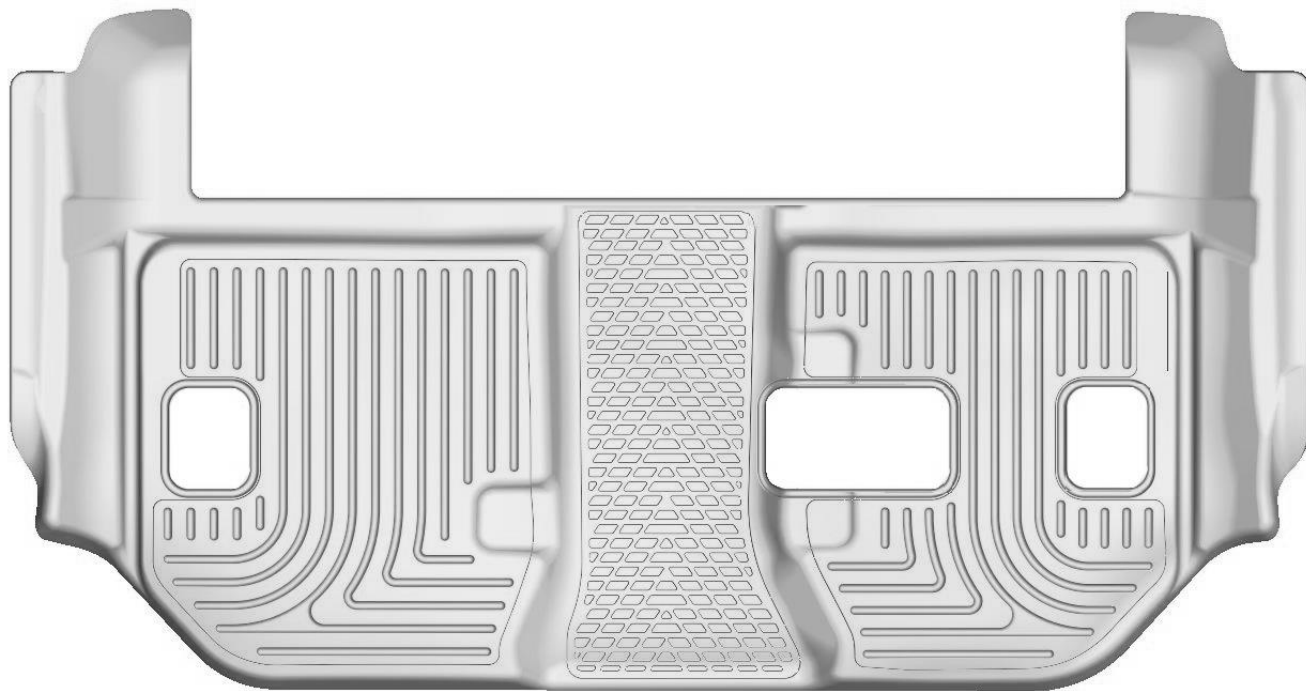

BEFORE ATTEMPTING TO INSTALL YOUR LINER, FIRST FLIP/FOLD YOUR SECOND ROW SEATS FORWARD TO EXPOSE THE 3RD ROW FLOOR PAN. WITH THIS DONE YOU CAN POSITION THE LINER IN THE FLOOR ORIENTED AS SHOWN ABOVE. NOTE THAT THE TWO DOOR EDGE TONGUE SECTIONS TUCK UNDER THE 2ND SEAT LINER.

NOTE THAT THE THREE TRIMMED AREAS IN THE LINER ALLOW THE SECOND ROW SEATS TO FASTEN THROUGH THE LINER. IF YOUR LINER DOES NOT HAVE THESE THREE AREAS TRIMMED, DO NOT INSTALL THE LINER AS THE 2ND ROW SEATS WILL NOT FASTEN SECURELY IN PLACE. INSTEAD, PLEASE CALL HUSKY LINERS AT 800-344-8759 FOR FURTHER ASSISTANCE.

NOTE 2ND ROW SEATS ARE FLIPPED/FOLDED FORWARD FOR INSTALLATION



NOTE SEAT ATTACHES TO FLOOR THROUGH LINER

