


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR SUBARU OUTBACK/LEGACY

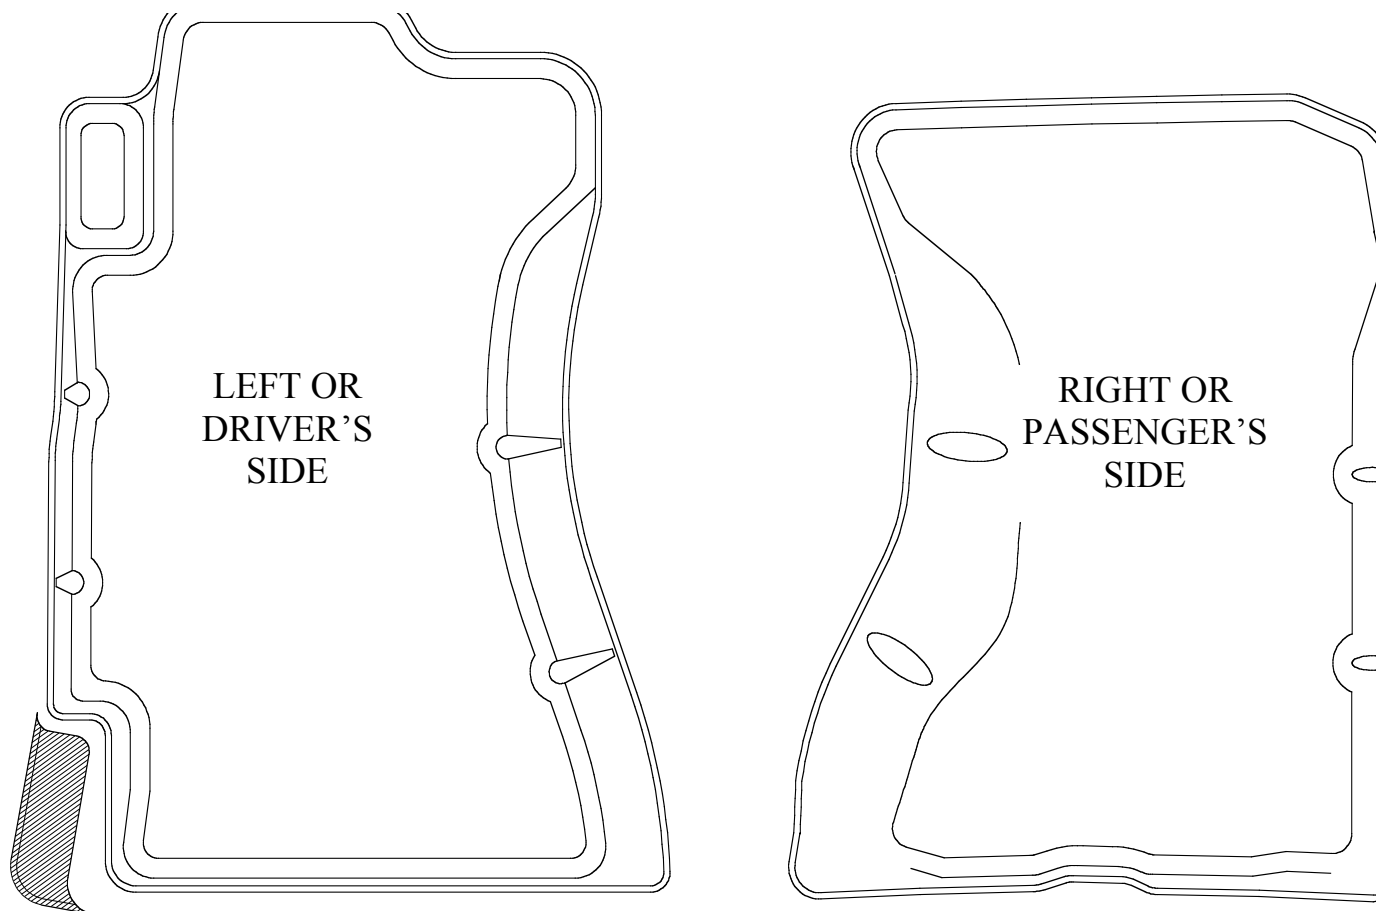

YOUR HUSKY LINER CAN EASILY BE TRIMMED TO ALLOW ACCESS TO THE FUEL DOOR RELEASE LEVER WITHOUT REMOVING YOUR LINER (FUEL RELEASE LEVER NOT USED ON ALL MODELS). TO ALLOW ACCESS, SIMPLY TRIM LINER USING THE MOLDED TRIM GROOVE AS A GUIDE. LEAVE THE " " LIP AS DEMONSTRATED ABOVE.