

FORD EXPLORER REAR MUD GUARDS INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

Tools Required

- 1/8" drill bit / Drill
- Center punch / Hammer
- Short Phillips screwdriver or drill attachment

Package Contents

- Driver & passenger side rear mud guard
- #10 SEM screw (qty. 4)
- U-clip (qty. 4)
- Instruction sheet

NOTE: It may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove existing fastener from location A and C.
3. Pull fender liner forward and install U-clip at location B. U-clip clips over fender. (Figure 1).
4. Attach mud guard at location A and C to rear fender with existing fasteners. Check fit and level before tightening.
5. Install #10 SEM at location B.
6. Using mud guard as a template, mark and drill 1/8" hole at location D.
7. Install #10 SEM screw through mudguard and fender liner into u-clip at location D. U-clip does not clip over fender liner; it installs behind liner and acts as a nut. (Figure 2).

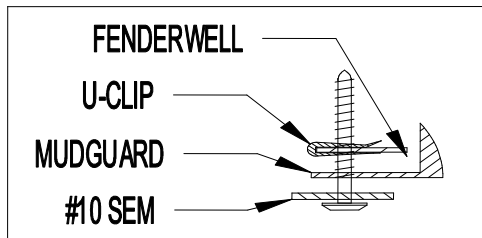


FIGURE 1


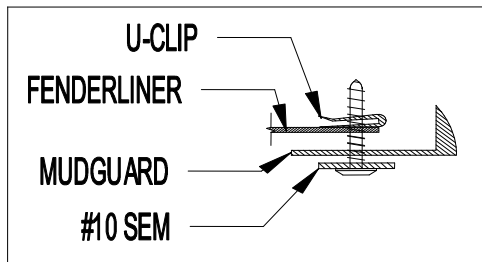


FIGURE 2

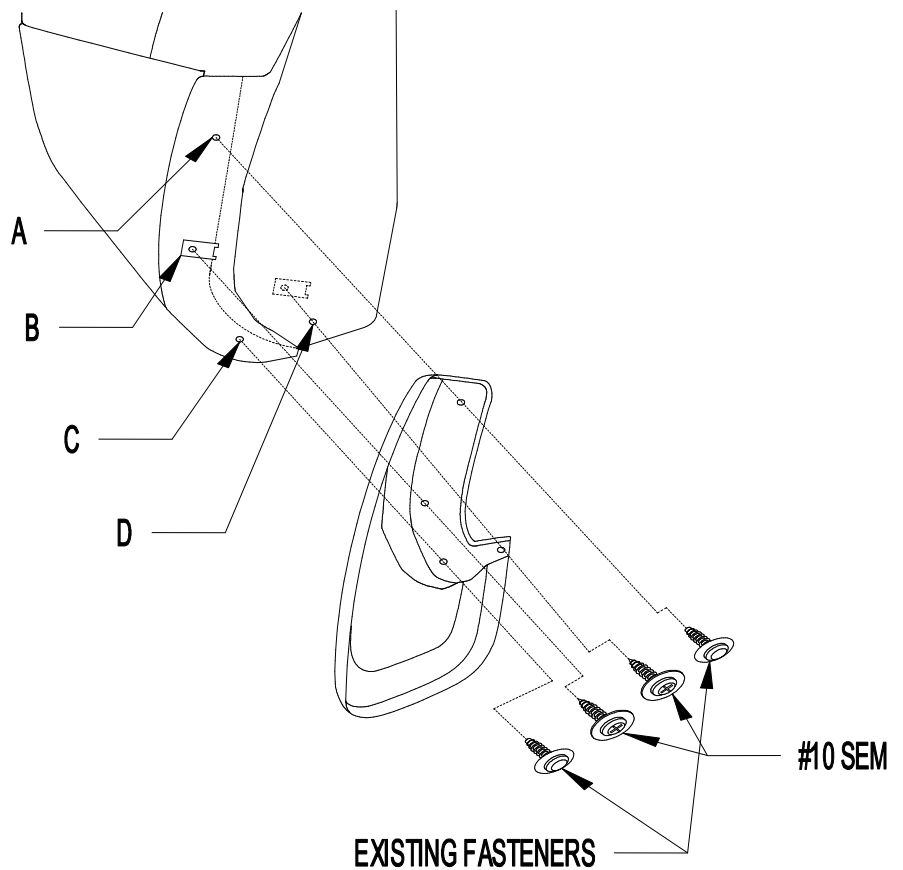

PAINTING INSTRUCTIONS

Note: *If painting mud guards, perform a mud guard test fit to ensure correct fit and application prior to painting.*

1. Clean mud guard with a soap and water solution to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer.